



How to view fields in the BRADIN Chapter

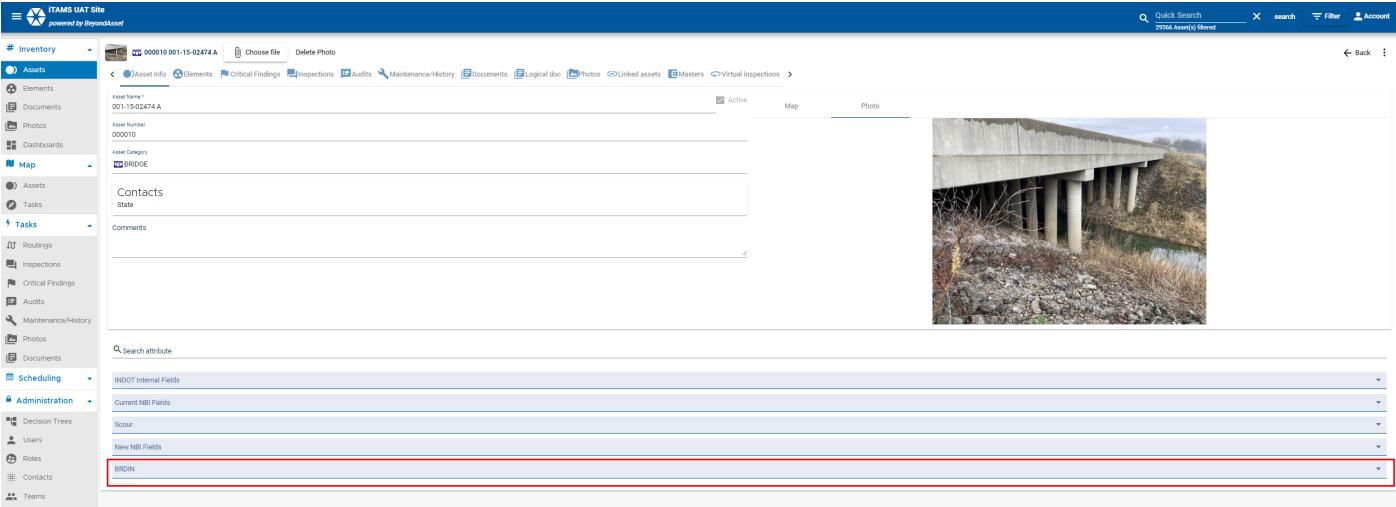


This function is located in: **Inventory->Asset**

Description

This “HOW TO” manual describes how to view fields and values in the Chapter called BRADIN in the Asset Menu in the Web Application.

Steps

#	Description
1	<p>Go to Inventory and click on Assets from the left menu list. Select an Asset. Click the Chapter BRDIN at the bottom of the Asset page.</p> 



Description

2 Click the on the Chapter BRADIN. See fields and values.

The screenshot shows the iTAMS UAT Site interface. The top navigation bar includes 'Inventory', 'Assets', 'Map', 'Tasks', 'Routing', 'Inspections', 'Critical Findings', 'Audits', 'Maintenance/History', 'Photos', 'Documents', 'Scheduling', and 'Administration'. The main content area displays details for an asset named 'Asset Name: 001-15-02474 A'. A photo of a bridge is shown on the right. Below the photo is a table of fields:

INDOT Internal Fields			
Current NBI Fields			
Score			
New NBI Fields			
BRCH			
BRIDGE_RATING_ID	NBLNBR	EV_SINGLE_AXLE_SPL	
EV_TANDEM_AXLE_SPL	EV_GROSS_SPL	CV_GROSS_SPL	
Commercial Vehicle Sign	Posted Tonnage (Single Axle) CV	Posted Tonnage (Gross) CV	
Posted Tonnage (2-axle)	Posted Tonnage (3-axle)	Posted Tonnage (4-axle)	
Posted Tonnage (5-axle)	Posted Tonnage (6-axle)	Emergency Vehicle Sign	
Posted Tonnage (Single Axle) EV	Posted Tonnage (Tandem) EV	Posted Tonnage (Gross) EV	
Tons Posted	Date Posted/Closed		