

# INDOT HOW TO Manual – Web Application



### How to manage templates from Web Application




This function is located in: Inventory->Assets

#### Description

This "HOW TO" manual describes how to manage templates

The manual also applies to the templates of the following: Elements, Inspections, and Flags


#### Steps

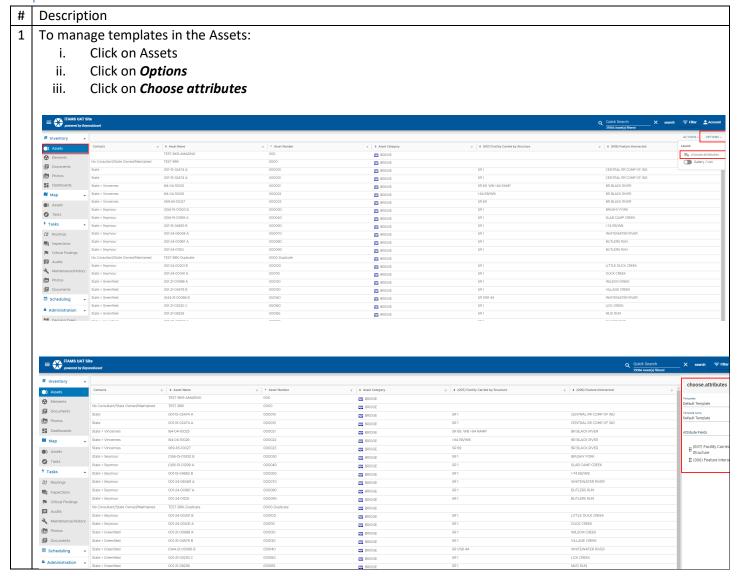



# INDOT HOW TO Manual – Web Application




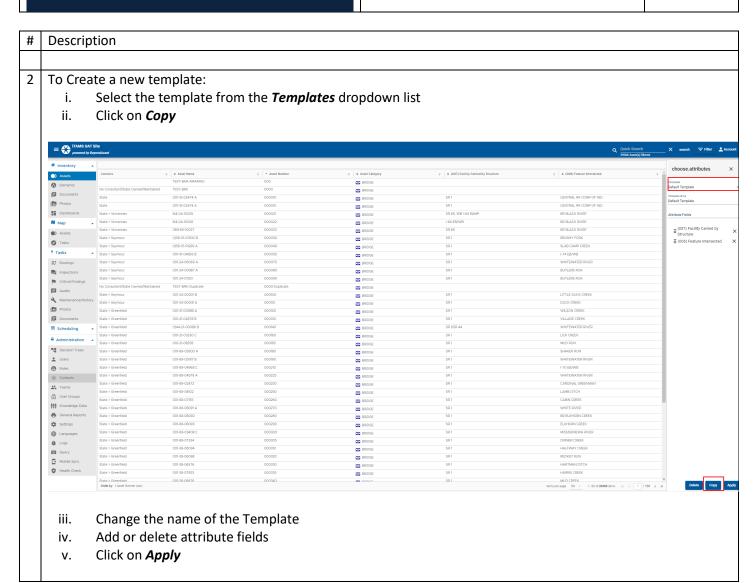



# INDOT HOW TO Manual – Web Application



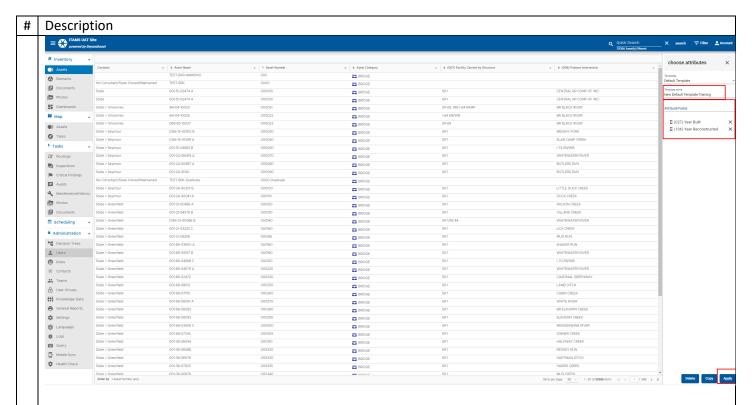

#### Note:


There are predefined templates to every module.

- 3 | To edit a template:
  - i. Select a template from the *Templates* dropdown list
  - ii. Click on X in front of the attribute you would like to delete
  - iii. Choose an attribute from the Attribute Fields dropdown list
    - a. NOTE: Not all Attributes Fields will appear in the dropdown as there are over hundreds of attributes. You will need you begin to type the attribute name. For example "year built" for that attribute to appear.



# INDOT HOW TO Manual – Web Application




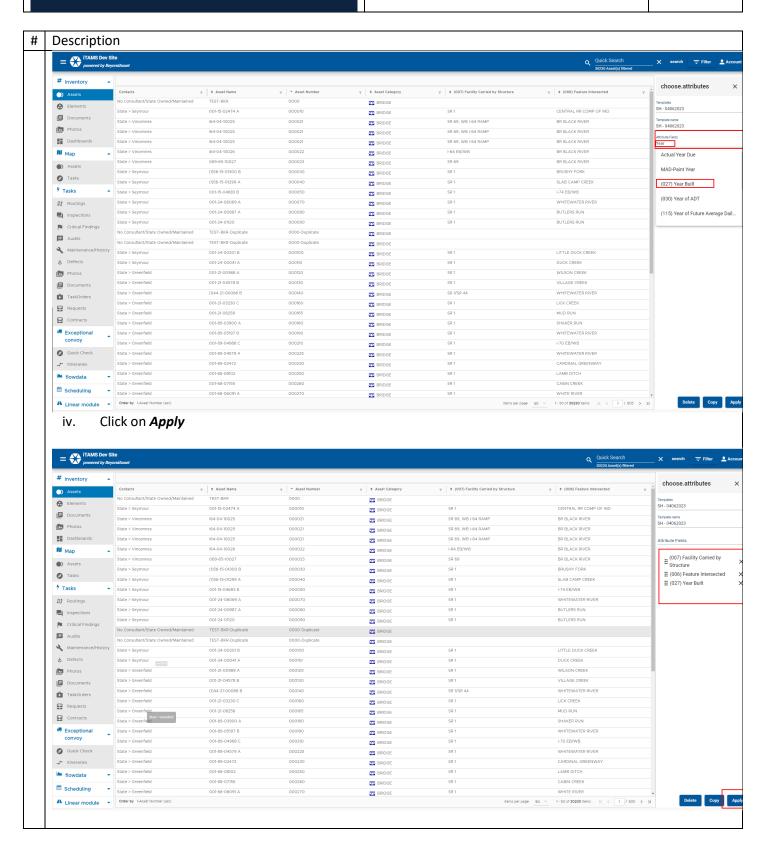



# INDOT HOW TO Manual – Web Application



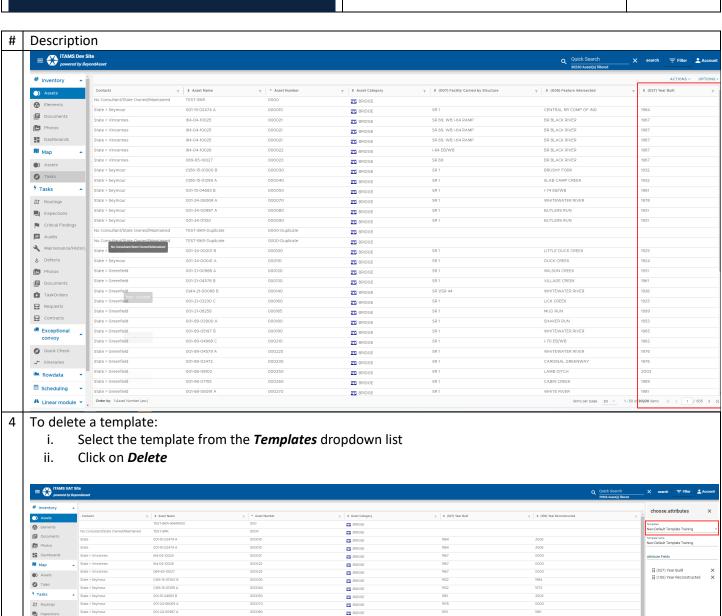

m BRIDGE

■ Audits

Maintenar

Documents

User Groups

Settings

Health Check

Decision Trees
State > Greenfield

State > Seymour State > Seymour State > Greenfield

TEST-BRK-Duplicate

001-24-00201 B 001-24-00041 A 001-21-00988 A

001-89-05197 B 001-89-04968 C

001-89-04579 A

001-68-07155

001-68-03408

Delete Copy Apply