



How to View Information in the Scour Chapter

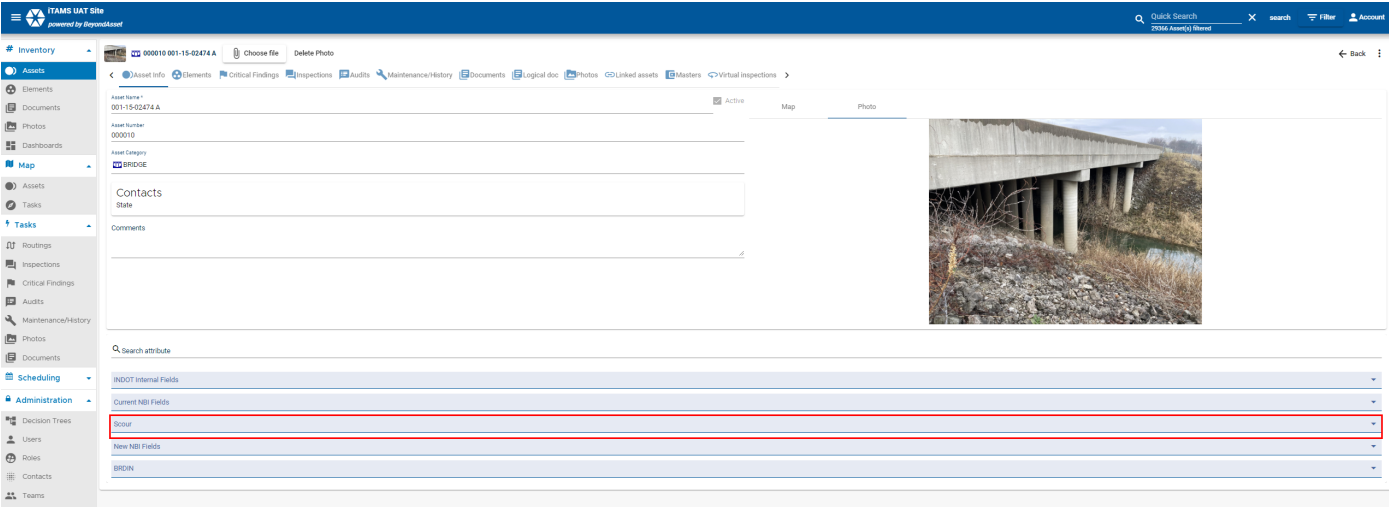


This function is located in: **Inventory->Asset**

Description

This “HOW TO” manual describes how to view the information in the Scour Chapter in the Asset Menu in the Web Application.

Steps

#	Description
1	<p>Go to Inventory and click on Assets from the left menu list. Select an Asset. Select the Chapter Scour.</p>  <p>The screenshot shows the iTMAS web application interface. The left sidebar contains a menu with 'Assets' selected. The main content area displays details for an asset with ID 00010 001-15-02474 A. The 'Scour' chapter is highlighted in red in the 'INDOT Internal Fields' dropdown menu.</p>



Description

2 Click on the Scour Chapter to view fields and values.

The screenshot displays the iTAMS UAT Site interface. The top navigation bar includes 'ITAMS UAT Site', 'Quick Search', 'search', 'Filter', and 'Account'. The left sidebar contains a navigation menu with categories like 'Inventory', 'Assets', 'Map', 'Tasks', 'Routing', 'Inspections', 'Scheduling', and 'Administration'. The main content area shows the details for asset '000010 001-15-02474 A', including a photo of a bridge and a table of fields and values.

Field	Value
Scour	
Scour Analysis Status	Scour Analysis Determination
Scour Analysis Date	Scour Analysis Determination
Scour Critical Safety Status	Date of Counter Measure Placed or Field Verified
Scour Analysis Comment	(113) Scour Critical Bridges
Scour Analysis Inspection Comment	